


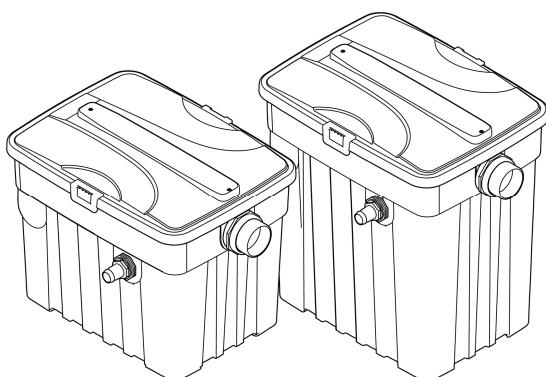


DE Gebrauchsanleitung
EN Operating instructions
FR Notice d'emploi
NL Gebruiksaanwijzing
ES Instrucciones de uso
IT Istruzioni d'uso


Flow-through pond filter

FTF 5000/8000




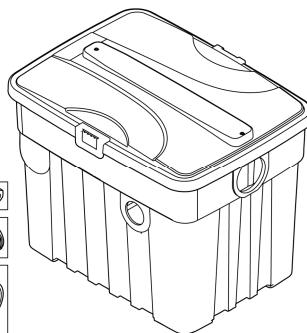

2x

 

FTF0003

 


Flow-through
pond filter FTF 5000

kg \Rightarrow 1.8 kg

l/h \Rightarrow max. 2000 l/h

[mm]



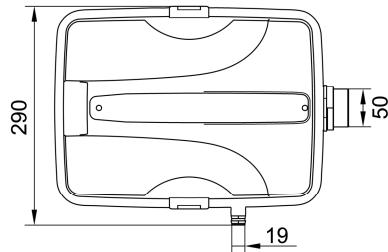


Flow-through
pond filter FTF 8000



kg \Rightarrow 2.2 kg

l/h \Rightarrow max. 2000 l/h


[mm]

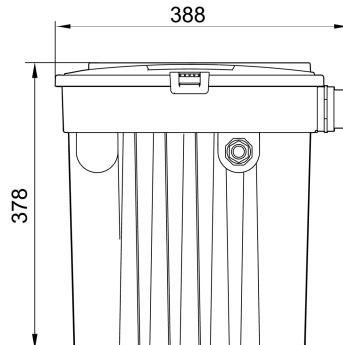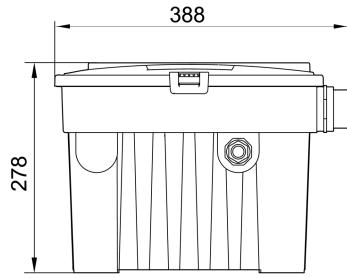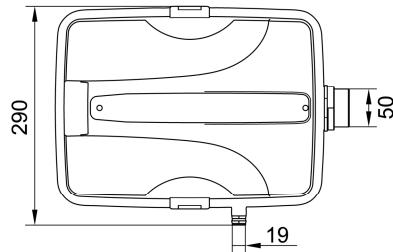


FTF0008

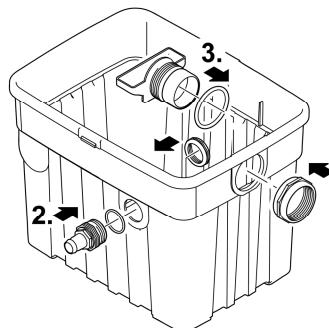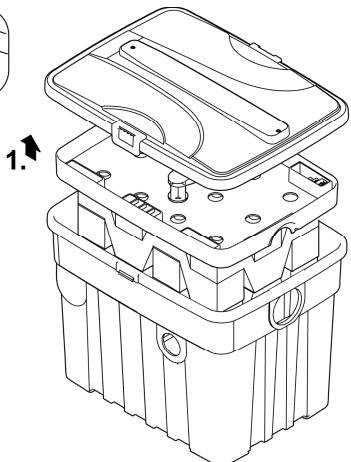


FTF0004

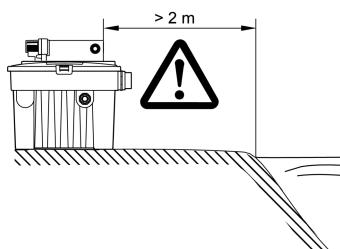

FTF0009

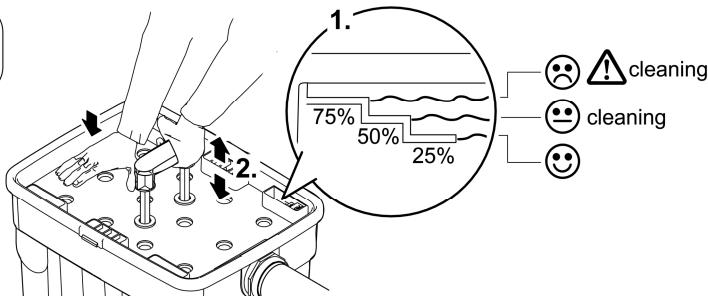


FTF0006

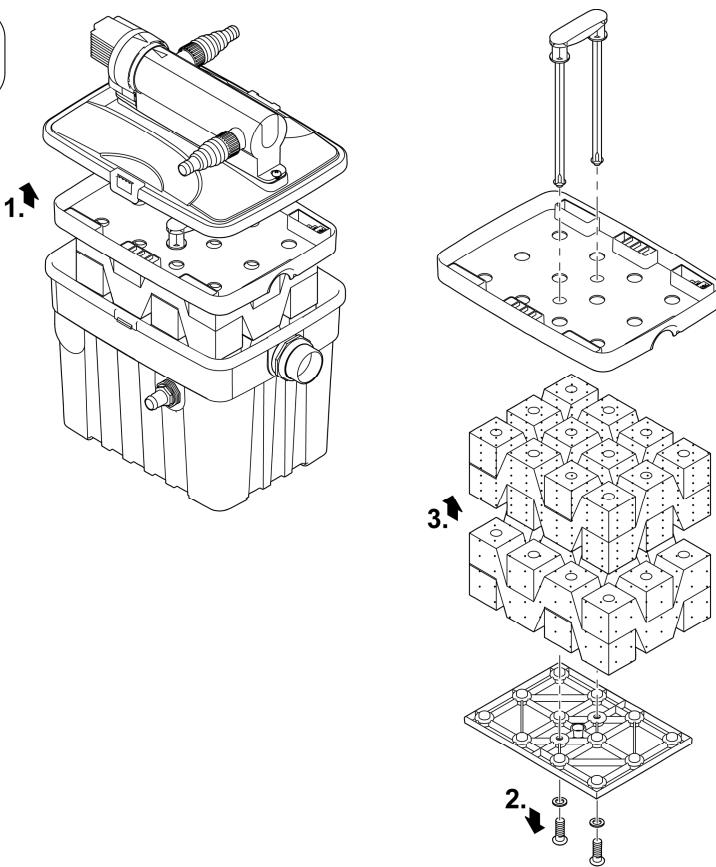


FTF0007


Flow-through pond filter Set FTF 5000/8000

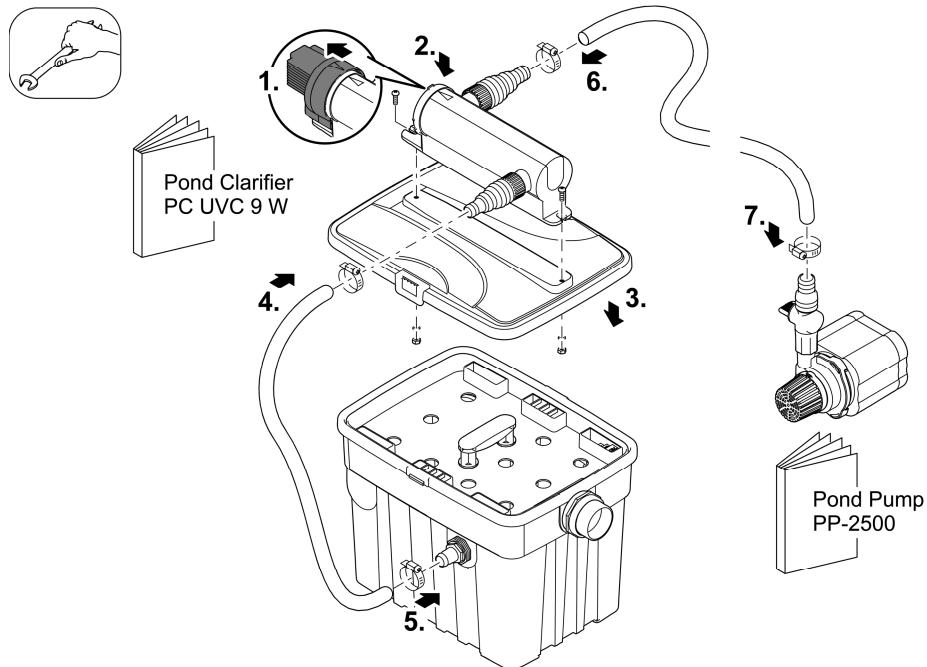


FTF0005

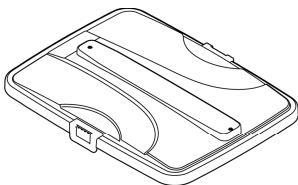

Pos.	
1	85513
2	85514

 


Flow-through
pond filter FTF 8000


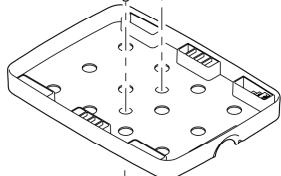


Flow-through
pond filter FTF 5000

1

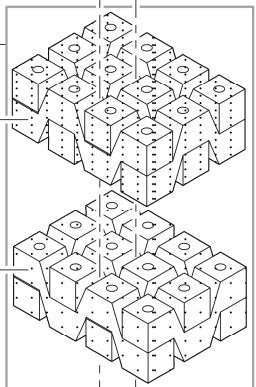

2

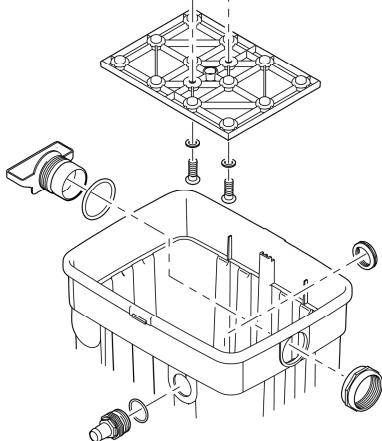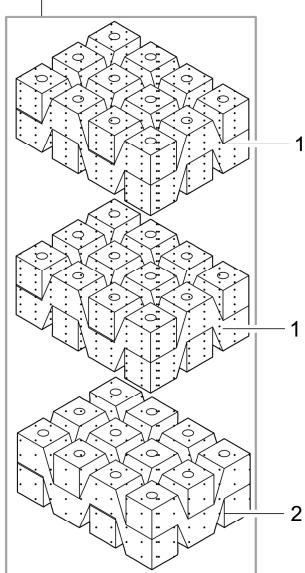

FTF0011

Aquanique GmbH
Fuhrmannstraße 6
D-95030 Hof · Germany

Questions or concerns?
support.eu@aquanique.de